

VI.5.3D-ASSIM PROGRAM FCST HCL TECHNIQUE ASSIM

Purpose

Technique ASSIM sets whether Assimilator (ASSIM) Operations are to be run when running Function FCEXEC.

Valid values are NO (0) and YES (1).

The Global default value is NO.

This Technique is Universal.

Form of Input

ASSIM(integer)

where integer is 0 or 1 specifying whether or not to run ASSIM Operations:

0 = do not run ASSIM Operations

1 = run ASSIM Operations

Example

ASSIM(1)

This example will run the ASSIM Operations.